


Read Me  
Before Use


# Wall Mountable CD Player

MODEL : KC-809

CE FCC RoHS ☒

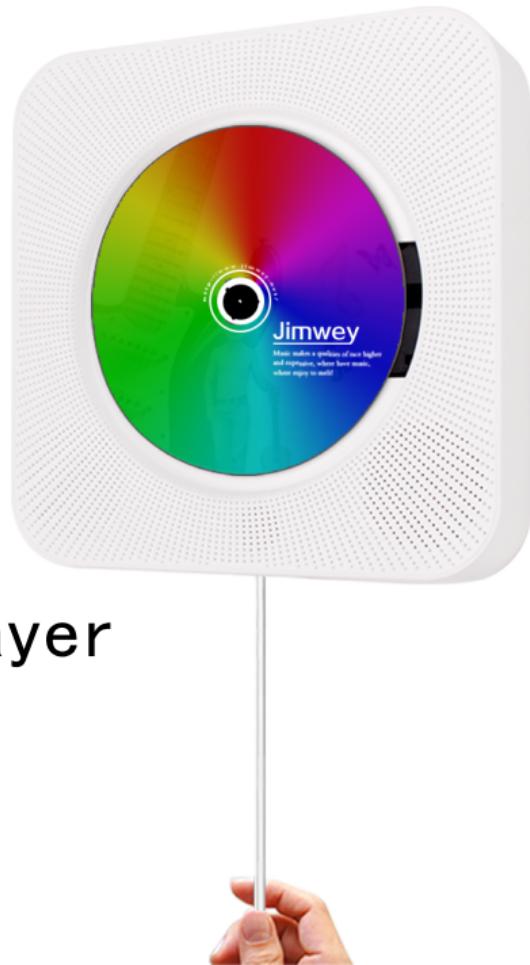

## 4-Steps Quick Instruction

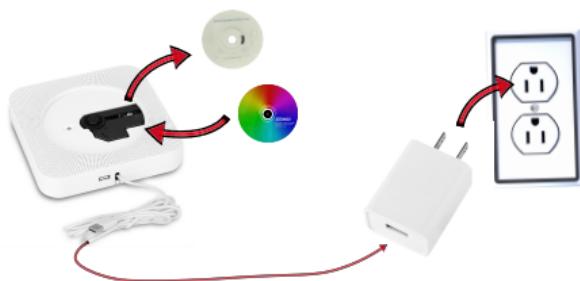

1. Remove the paper CD and put a correct CD discs.
2. Insert the USB power cable into the 5V2A adaptor and plug into power outlet AC 110-240V
3. Pull the pulling cable switch to power on,it will read CD automatically.
4. Remove the insulating film on the battery drawer before remote it.



### Warning / Reminder:

1. The power supply input adaptor to CD player must be 5V 1.5-2.0A.
2. Put a CD to avoid dust in condition of long time non-use.
3. Do not use cracked or damaged CD.
4. Do not touch the laser by hand.
5. The CD player can not be powered-on by the remote.You have to pull the pulling-cord-switch before using remote.

### Aftersales Service Contact

Email : UK: [xinjinweidianzi\\_eu@hotmail.com](mailto:xinjinweidianzi_eu@hotmail.com)  
US: [xinjinweidianzi\\_us@hotmail.com](mailto:xinjinweidianzi_us@hotmail.com)

( Remember to mention the order # )  
You will be responded within 12hrs

## Content

Quick Usage Instruction	.....	2
Contents	.....	3
Packing Details	.....	4
Structure and Buttons	.....	5
Remote	.....	6
CD Mode Operation	.....	7
BT Mode Operation	.....	8
FM Radio Operation	.....	9
AUX Mode Operation	.....	10
USB/SD Flash Disk & A-B Repeat & Audio Output	.....	11
LED display & LED light	.....	12
Sleep timer operation	.....	13
Troubleshooting & Specifications	.....	14
Wall Mounting Instruction	.....	15

## Packing List



CD player & Paper Disc Cover



Remote



Desk Stand



5V2A USB adaptor



Wall Mount Plate



3.5mm male-to-male Cable



Wall Mount Kit



Manual

## Structure and buttons




- **3.5mm Audio Jack for Headphone**
- **SD Reading Port**
- **Pull Switch:**  
• Pull to power on/off
- **USB Port**



**LED Display**  
Show the working mode,  
playing time and the  
Countdown of the sleep timer

## Remote

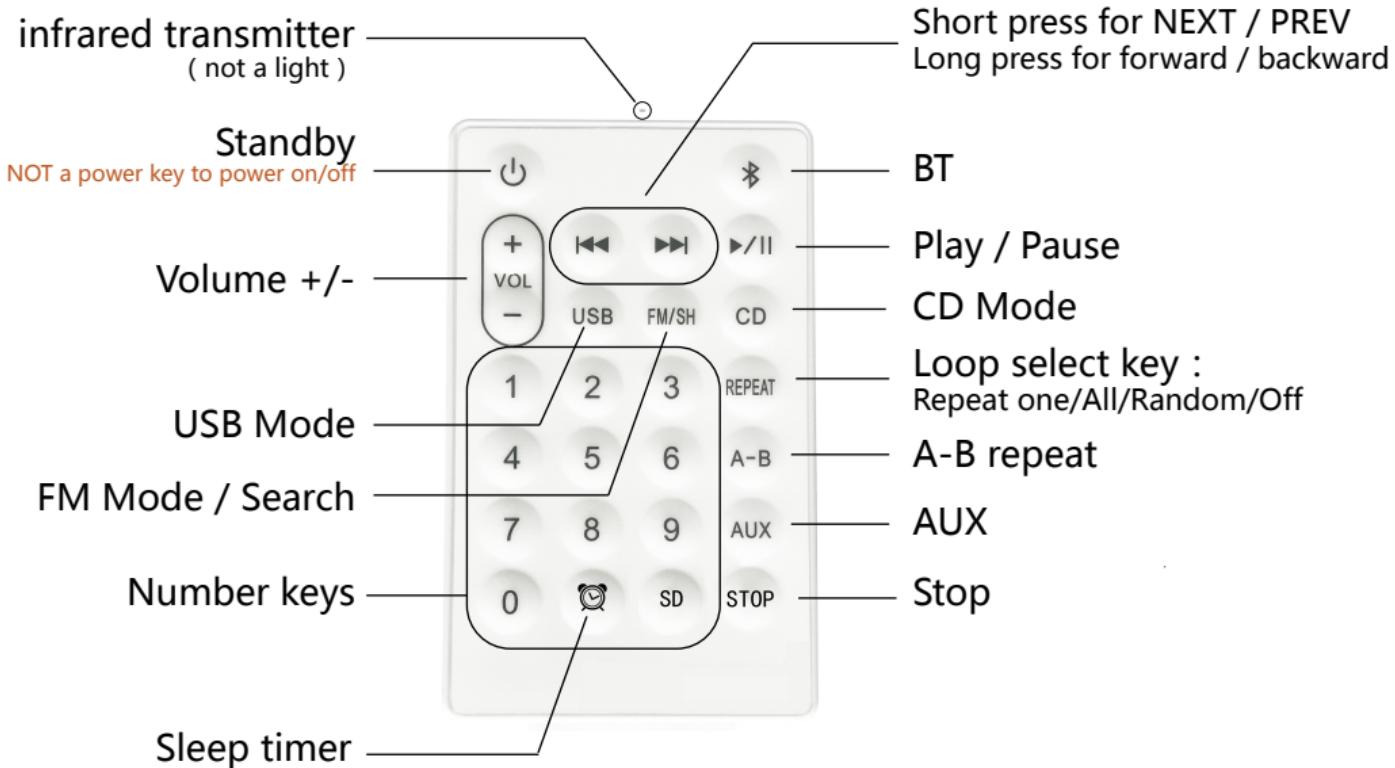

## CD Mode

Two ways to shift into CD mode :

① Press MODE until it shifts to CD mode

② Press CD key on remote to shift into CD mode



- Put a correct CD and pull the power switch,it will read and play CD automatically after power on.
- CD player will shift into FM radio mode automatically after power on if the CD is not readable
- It supports forward/ backward & A-B repeat .You can select tracks by the digital buttons on remote
- When CD player is power on ,it plays the same track which was playing when last time power off



## BT Mode

Two methods to shift into BT Mode :


① Press MODE to shift to BT mode

② Press the BT key on remote



Search the BT and pair with KECAG

- BT list name " KECAG"
- When the CD player pairs with any BT enabled devices. It works the same theory as other BT speakers. It receives BT from other devices but not transmit BT to any other BT earphone / speaker
- The remote is able to control volume and NEXT/ PREV in BT working status

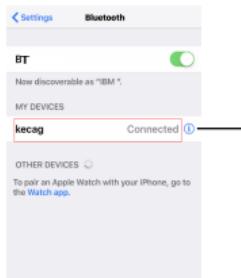


## FM Radio

Two methods to shift into FM mode :

① Press the MODE button to shift from CD to FM mode

② Press the FM key on remote

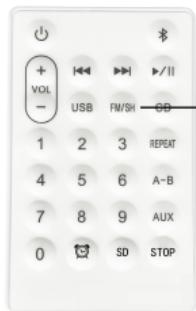


Full auto search / semi-auto search

- Full auto search : Under FM working mode , short press the FM key to start full-auto search , wait for a short time to complete the auto search and the searched channels will be saved into the number buttons.then you can press number keys on remote to play the related channels.
- Semi-auto search: Under FM working mode , Long press NEXT/PREV key and release finger until the player become mute and it will automatically shift into the next/prev FM channel. Each time it searches only one channel and you can save this current track onto any number by long pressing the related number key on remote



## AUX Mode

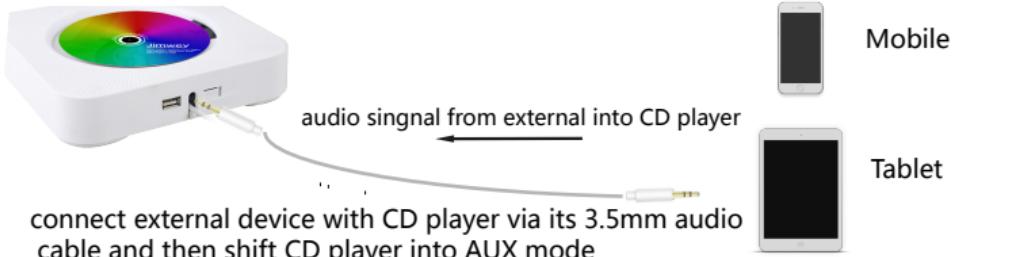

Two method to shift into AUX :



- ① Press MODE to shift to AUX mode
- ② Press the AUX key on remote



- Under the AUX mode, the CD player works as a wired speaker
- It can be used as a PC speaker in this mode.


## USB/SD Mode、A-B repeat

First insert an USB drive into USB port



- Insert USB drive while power-on,CD player shifts into USB reading automatically
- Under USB mode,you can operate by remote control.
- Under USB mode. you can operate A-B repeat

## Audio Output

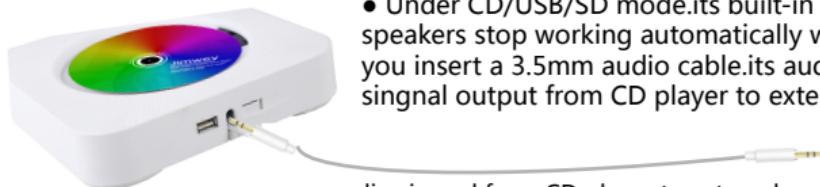


- Under CD/USB/SD mode.its built-in speakers stop working automatically when you insert a 3.5mm audio cable.its audio singnal output from CD player to external

Two methods to shift into USB mode :

- ① Insert a USB drive in power-on condition and it will shift into USB reading automatically .

- ② Press USB/SD key on the remote to shift into USB mode

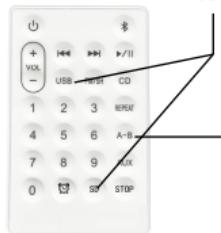

## A-B repeat :

In CD/USB/SD mode,press the A-B key twice to repeat the content between two presses and it will play this content all the time until press A-B key again to stop



## LED display & LED light



LED screen  
Shows playing mode  
and playing time



Multi color LED light  
Shows a related color in  
different working modes.

CD Mode



CD

0:27

USB Mode



USB

0:56

SD Mode



SD

02:06

BT Mode



BLUE

FM Radio



107.5

AUX



LINKE

## Sleep timer operation

Use the clock key on the remote to set the sleep timer.



A clock icon comes out on the display while the sleep timer is activated

### Setting:

- time set range: 30 - 180 minutes.
- the sleep timer is activated by pressing the clock key once and it sets starting with 30 mins
- it adds 30 mins by each press which shows on the display when you are setting, the sleep timer can be set maximum 180 mins.then press one more time to turn off the sleep timer.
- set a time and the player starts to count down until it become standby automatically in the end

## Specifications & Troubleshooting

### Specifications:

1. CD format support: CD,CD-R,CD-RW,MP3,WMA
2. FM Radio Range: 87.5KHz-108.0MHz
3. BT version 4.2
4. Speaker: 45mm X 2
5. Rated impedance: 4Ω
6. Speaker output: 3W x 2
7. Power supply: AC110-240V, 50KHz/60Hz
8. Power/Switch cable length: 2.5m
9. Dimension of main unit/package: 189mm\*189mm\*37mm
10. Net weight/Gross weight: 540g/900g
11. Color: white/blue/pink/black

### Trouble shooting:

- Remote control does not work

Make sure you've already removed the battery insulating sheet on the remote control battery drawer.

Make sure the remote control aim at the suitable place : close to the pull switch area on the player

Make sure the distance between remote control and the CD player is within 6 meters.

Check if the batteries inside the remote control is dead.

**ATTENTION:**Remote is not able to power the player on/off instead of pulling the power switch.

- The CD player does not work

a. Check the power supply is connected successfully. If you are not using its attached USB adaptor please make sure the power is standard 5V/1.5-2.0A.

b. If the player works under a situation with large temperature difference, the laser head may covered with mist and cause trouble. Please put aside the CD player for 1 hour until it become dry, then turn on the power and try to play CD again

- CD function does not work

Check if the format of your disc is the suitable one or check if your disc is old or broken. And make sure the disc is placed correctly.


## Wall Mount

TWO steps to mount on the wall


①-1 use three nail to fix the plate on the wall



①-2 use four screws to fix it if the first method is not firm enough.

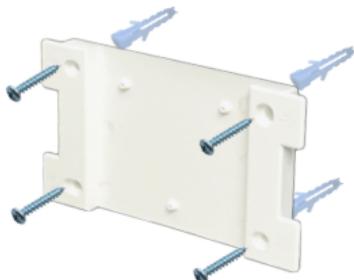

② fix the CD player onto the plate

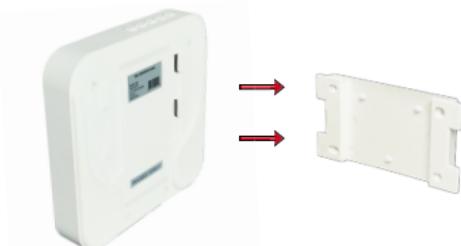

One step to mount it on the desk



Dear customers,

Thank you so much for your purchase! Jimwey, aims to provide you with the best products and the most responsible after-sale service. Offer you a happy purchase experience is our struggling goal.

Jimwey CD Player a good choice as a gift for kids and elders. If you have any question during use the CD player, please feel free to contact us, we will respond you within 24 hours and do our best to solve the problem.

Best Regards,  
Jimwey Shop

THANKS FOR READING