# "渔"悦生活由我智创

# 产品功能图



# 智能遥控打窝船

Intelligent remote

control bait boat



User manual

# 遥控器按键功能说明

 



Fishing Boat

# "渔"悦生活由我智创

### 遥控器功能键操作说明

◆ **灯光切换**:按一下遥控器左上角按钮,船头探照灯开始闪烁,再按 🚺



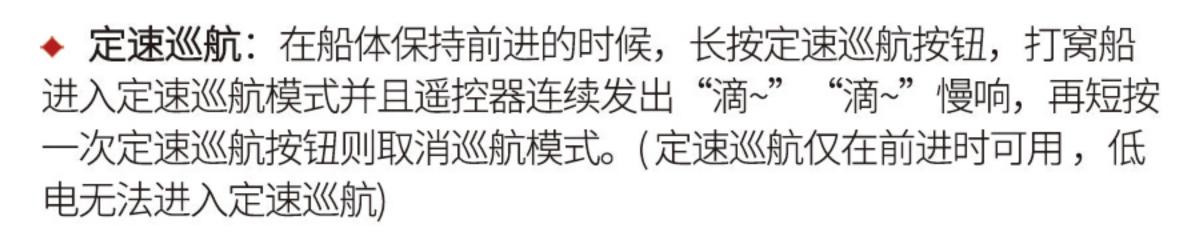

◆ 马达速度微调: 上推左边的左马达微调键、左马达加速右马达减 速,下推左马达微调键则左马达减速右马达加速,右马达微调键操作

◆ 料仓键:按下左料仓键则左料仓弹起,按下右料仓键则右料仓弹起



# 遥控器操作说明

◆ 前进、后退、左转、右转



动,船体左转。





④将左方向杆向上推动,右方向杆向下推



# "渔"悦生活由我智创

# 7.4V×5200mAh大容量电池





### 电池使用与充电说明:



◆主机电池(标配) 本机内置一组电池



◆电池的取出和固定 顺时针旋转即可打开并取出电池,将固 定架按压到位后逆时针旋转即可固定





◆电池充电接口 把电池接上充电器即可充电红灯: 充电中 绿灯: 充电完成

# "渔"悦生活由我智创

当出现任意以下一种提示时,请尽快开回岸上!


- ◆ **船体低电量**:LCD屏显示船体电量图标仅剩1格时,应当及时开回来更换电池。
- ◆ **遥控器低电量**:LCD屏显示遥控器电量仅剩1格时,应当及时开回来更换遥控器电池。
- ◆ **船体断频**: 船在行驶过程中,LCD屏显示船体电量图标消失,表示船体的信号断开。 注意:使用过程中,请间隔停歇一段时间,让遥控器去检测船体电量并及时更新到船


体电量图标。

#### ◆遥控器

每次使用完后要检查马达是否有缠绕杂物


- 、使用完毕后请擦拭水分保持船体的干燥和清洁。
- 2、电池在长时间不使用时,请取出并充电存放。3、请勿靠近高温物体。
- 、不使用时,请将打窝船存放起来,以防沾尘土。

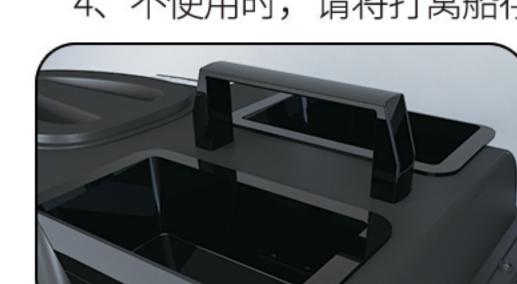

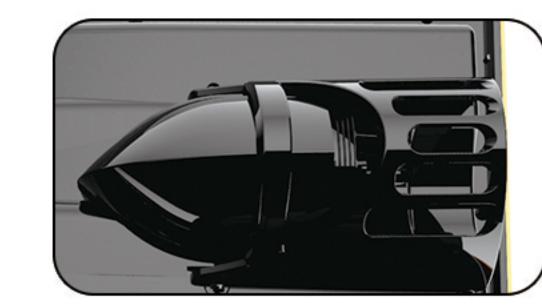

### 充电充不进去怎么办:

- 充电口是不是插到位,在检查接口处接触正不正常(图2)。

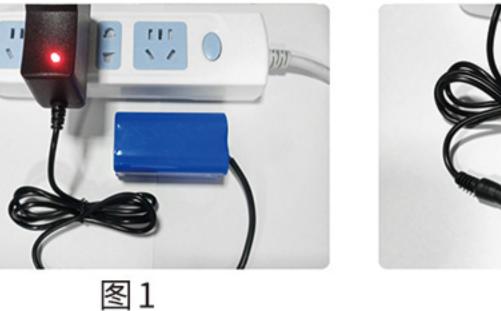

### ◆船体和遥控器对不上频怎么办?

器左微调键,打开船的电源,再打开遥控器电源;遥控器发出"滴"声长响,当遥控器红色指 示灯常亮,LCD屏闪动。船体开关键灯光常亮,转向灯白色灯常亮,即对频成功。


# "FISH" IS A LIFE OF MY LIFE

### **Product Function Diagram**



#### **Remote Control Button Function**



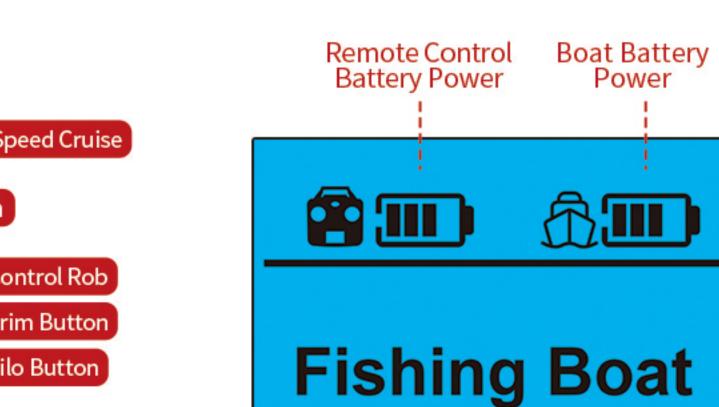

# "FISH" IS A LIFE OF MY LIFE

# Remote Control Function Operation Instructions

Light switching: Press the button on the upper left corner of the remote, the searchlight starts to flash; press the light button again, the searchlight will always on; when you press it for the third time, and the searchlight will turn off.



◆ Fixed-speed Cruise control: When the boat keeps moving forward, long press the fixed-speed cruise control button, the boat will enter the cruise control mode and keep going forward without remote control, remote control will continuously slowly emit "di~" and "di~" sound, and then short press fixed-speed cruise control button cancels the cruise mode. (Fixed-speed cruise control function is only available when moving forward, when the boat in low power cannot enter fixed-speed cruise



Motor speed fine-tuning: Push Forward the left motor trim button, the left motor accelerates and the right motor to decelerate, push Backward the left motor fine-tuning trim button, the left motor decelerates and the right motor accelerates, the operation of the right motor fine-tuning key is the same.



Baiting button: Press the left baiting buton to pop up the left silo, and press the right baiting button to pop up the right silo.

# Remote Control Operation

Forward、Backward、Turn Left、Turn Right



2 Push both directional sticks down at the same time,









# "FISH" IS A LIFE OF MY LIFE

# 7.4V×5200mAh Big Capacity Battery


Smoother sailingWind and wave stronger resistance

#### Left Right Turning Light



# Battery usage and charging instructions:



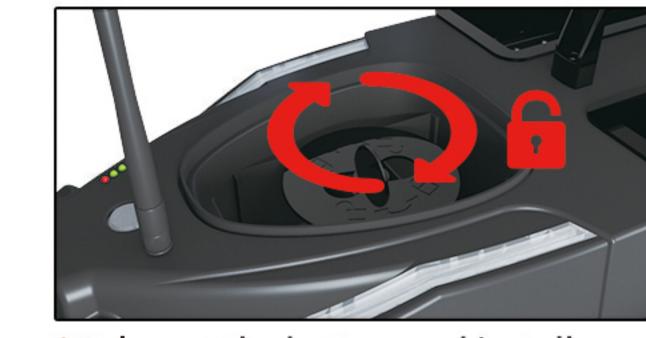

◆ Take out the battery and install Turn clockwise to open and remove the battery, press the holder into place and turn counterclockwise to secure



interface when using



◆ Battery charging interface
Connect the battery to the charger
Red light: charging
Green light: complete

# "FISH" IS A LIFE OF MY LIFE

#### Warning Alarm

When any of the following alarm appear, please drive back to shore as soon as possible! ◆ Low battery of boat: When the LCD screen shows that the boat battery icon is only 1 bar left, you should drive back in time to replace the battery.

◆ Low battery of remote control: When the LCD screen shows that the battery of the remote control is only 1 bar left, it should be driven back in time to replace the battery of the remote control.

◆ Boat frequency disconnection: When the boat is traveling, the LCD screen shows that the hull power icon

disappears, indicating that the boat signal is disconnected. Note: During use, please stop for a period of time, let the remote control detect the power of the boat and update it to the boat power icon.

# Maintenance

Remote Control


Please remove the battery when not in use for a long time.

Do not get close to high temperature objects.

Boat Hull

After use, please wipe the water to keep the boat hull dry and clean.
 When the battery is not used for a long time, please take it out and charge it for storage.



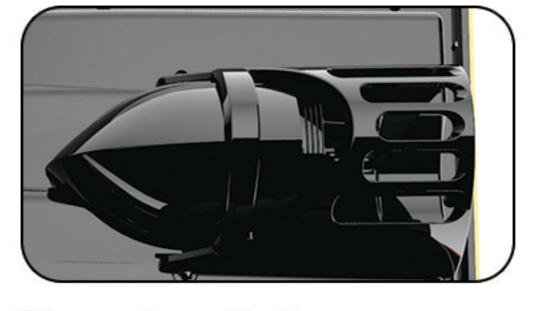


Motor

Check the motor for entangled debris

### What Should I Do If The Charging Fails:

1. First check whether the charger is it working normally (Figure 1). 2. Whether the charger is connected to the charging port in place, and the contact at the interface is it normal or not

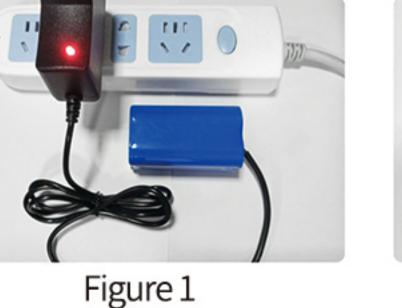



• What should I do if the boat and the remote control are not connected to the frequency?

◆If the remote control and the boat are power on, but the boat is not respond. Then you need to re-pair the frequency, long press the left trim button of the remote control, turn on the power of the boat, and then turn on the power of the remote control; the remote control emits a long beep sound, when the red indicator light of the remote control is always on, the LCD screen flashes. The light of the boat switch button is always on, and the turning light is always on, that is, the frequency pairing is successful.