


**DASUNG**  
"Not-eReader 103"  
E-ink Tablet User Manual

Version 1.0

# Button Function Introduction

---

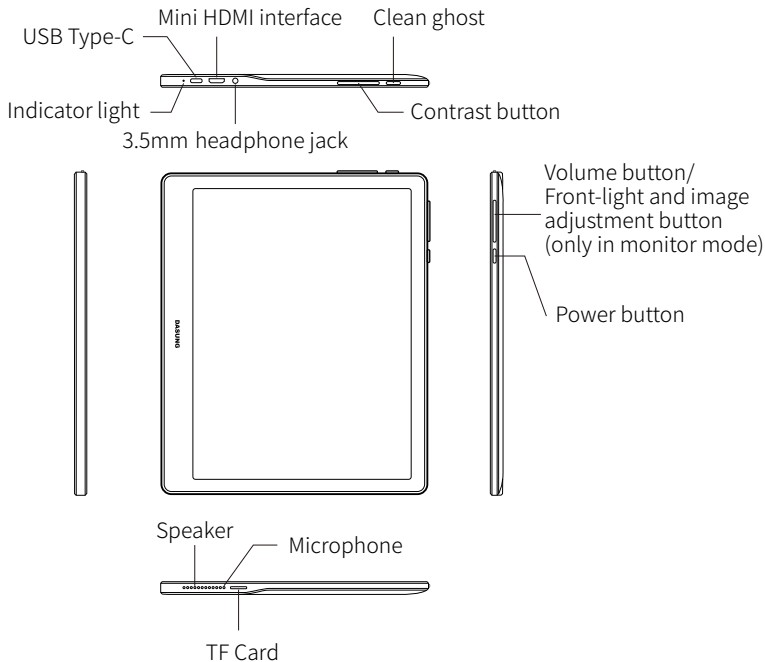

## Button introduction :

Button	Tablet Mode	Monitor Mode
C	Clear ghosting	Clear ghosting
Contrast +/-	Increase/Decrease the image contrast	Increase/Decrease the image contrast
Sound +	Increase volume	Adjust image mode
Sound -	Decrease volume	Turn on and switch the front-light (cool light, warm light, no light)
"Sound +"&"contrast +/-"	—	Adjust speed
"Sound +"&"contrast +/-"	—	Adjust brightness of the front-light

## Basic setting adjustment:

---

You can adjust the image mode , speed, contrast and front-light of the device through the drop-down menu or physical buttons.

### 【Image mode】

3 image modes:

Image I: Black or white , filter invalid information

Image II: Improve image clarity, reduce font burrs, and remove background color

Image III: Provide the best grayscale simulation

### 【Speed】

Three adjustable speed modes: Fast+/Fast++/Fast+++, to meet your different needs.

### 【Contrast】

Different contrast modes are convenient for you to adjust. It is recommended to increase the contrast when viewing text-based images, lower the contrast when viewing images or video-based images.

### 【Front-light】

Dual color system with cool & warm front-light. In the drop-down menu, when the slider is on the far left, front-light is completely turned off.

## Multifunctional Use:

---


### 【Tablet mode】

Turn on/off: Press the power button to turn on/off.

### 【Mini PC Monitor Mode】

Before using , please confirm that your computer has standard HDMI interface. If your computer has no HDMI interface , you need to purchase a corresponding adapter to connect the tablet (Tips: VGA interface is not compatible , VGA port outputs analog signals , the effect is not as good as HDMI high-definition digital signals , even if you use VGA adapter , it's still not compatible).

## Computer connection diagram :

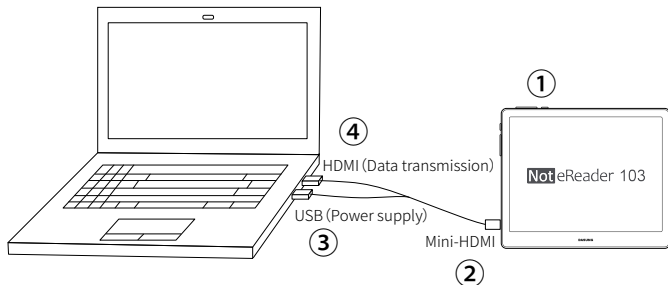

The correct connection sequence :

Step 1: Press the power button to turn on "Not-eReader 103" (make sure the device is starting)

Step 2: Connect Mini HDMI to "Not-eReader 103"

Step 3: Connect the USB cable to the computer

Step 4: Connect HDMI on the other side of the "Y-shaped " cable to the computer

Tips:

\* You can directly unplug the data cable after using. "Not-eReader 103" is still power on after unplugging the data cable. If you need to turn off the device, please press the power button to turn it off.


\* The USB interface must be directly connected to the USB port of the computer with Windows system, USB cable is powered for touch screen function (Mac is not compatible with touch screen function)

## 【Smartphone Monitor Mode】

- Cable connection

\* Please make sure your smartphone supports standard HDMI video signal output (iPhone is not compatible with cable connection).

\* Regarding smartphone cable connection, you should buy a suitable HDMI female adapter (For example: Type-C to HDMI female adapter).

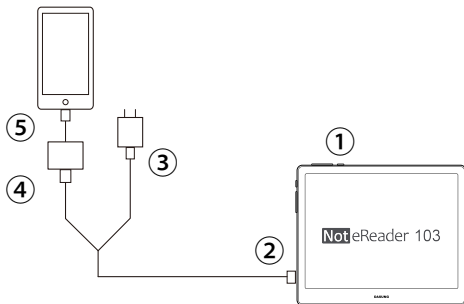

The correct connection sequence:

Step 1: Press the power button to turn on "Not-eReader 103" (make sure the device is starting)

Step 2: Connect Mini HDMI to "Not-eReader 103"

Step 3: Connect the USB to the power adapter

Step 4: Connect HDMI to the adapter

Step 5: Connect the adapter to your smartphone

- **Wireless connection**

Reminder: To use wireless connection, firstly make sure "Not-eReader 103" and your mobile phone connect to the same network, the tablet and your smartphone have been connected via Bluetooth ( If you use smartphone hotspot to provide network for "Not-eReader 103" , its connection is more stable and the latency is lower)

**【Android smartphone】**

\* If you ' re using the tablet for the first time , please install DASUNG Mirror App on your smartphone.

Installation method : Open the " Phone Monitor " App on Not-eReader 103 , scan the QR code with your smartphone , and install DASUNG Mirror App on your Android phone.

Connection method: Open DASUNG Mirror App in your smartphone and scan the QR code in the "Phone Monitor" App on the tablet to connect.

### 【iPhone】

IOS devices, please use AirPlay function, search for device ( Default name ATV-XXX ), click connect to use.

## Specifications

---

Product: Not-eReader 103

Model: EP1030312

Screen: 10.3-inch E-ink screen

Resolution: 1872 x 1404

System: Android 9.0

Battery capacity: 6400mAh

Input: 5V  MAX 2.8A (compatible with QC3.0 charger)

CPU: Qualcomm Snapdragon 660

RAM: 4GB

Storage: 64GB

---

Tel: +8610-69908008

Website: [www.dasung.com](http://www.dasung.com)

Email: [contact@dasung.com](mailto:contact@dasung.com)

Manufacturer: Beijing Dasung Tech Co., Ltd.

Address: 10th Tianxiu Road, Haidian, Beijing, China